

Kirjaudu modeemin hallintaan 192.168.1.1

The screenshot shows a web browser window with the address bar displaying "192.168.1.1/main.html". The page features a red header with the "Inteno" logo. On the left side, there is a navigation menu with the following items: "Device Info", "Advanced Setup", "Wireless", "Voice", "Diagnostics", and "Management". The "Wireless" item is highlighted with a red arrow pointing to it. The main content area is titled "Device Info" and contains two tables. The first table lists hardware and software details, and the second table lists network configuration details. Below the second table, there is a note: "This information reflects the current status of your WAN connection."

Device Info	
Board ID:	96816PVWM
Build Timestamp:	120406_2010
Software Version:	4.10ITT02.37
Bootloader (CFE) Version:	1.0.37-110.4
Wireless Driver Version:	5.100.96.0.cpe4.10L01a.4
Voice Service Version:	FG500_1.6.7
Uptime:	0D 0H 38M 1S

This information reflects the current status of your WAN connection.

LAN IPv4 Address:	192.168.1.1
Default Gateway:	eth4.1
Primary DNS Server:	172.16.6.160
Secondary DNS Server:	
LAN IPv6 Address:	
Default IPv6 Gateway:	
Date/Time:	Fri Sep 7 13:08:58 2012

→ Klikkaa "**Wireless**" päästäksesi WLAN-konfiguraatiosivulle

192.168.1.1/main.html

Inteno

Device Info
Advanced Setup
Wireless
 Basic
 Security
 MAC Filter
 Wireless Bridge
 Advanced
 Station Info
 Voice
 Diagnostics
 Management

Wireless -- Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply/Save" to configure the basic wireless options.

Enable Wireless

Hide Access Point

Clients Isolation

Disable WMM Advertise

Enable Wireless Multicast Forwarding (WMF)

SSID:

BSSID: E0:91:53:67:38:22

Country:

Max Clients:

Wireless - Guest/Virtual Access Points:

Enabled	SSID	Hidden	Isolate Clients	Disable WMM Advertise	Enable WMF	Max Clients	
<input type="checkbox"/>	<input type="text" value="wl0_Guest1"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	6A:9
<input type="checkbox"/>	<input type="text" value="wl0_Guest2"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	N/A
<input type="checkbox"/>	<input type="text" value="wl0_Guest3"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	N/A

Vaihda langattoman verkon nimi poistamalla **SSID**-kentässä olemassa oleva nimi, eli esimerkin kuvassa *Inteno_97*. Kirjoita samaan kenttää uusi **SSID** joka tulee olemaan uusi langattoman lähiverkon nimi.


Paina **Apply/Save**

Tämän jälkeen klikkaa **Security** päästäksesi muuttamaan salaustapaa ja langattoman verkon avainta.

Select SSID = valitse se verkko jonka asetuksia haluat muuttaa.

Network Authentication = Muuta salaustapaa. (Ei tarpeellista mikäli laitteesi ovat aiemmin toimineet tämän modeemin kanssa)

WPA/WAPI passphrase = WLAN-verkon salasana. Poista vanha ja kirjoita uusi salasana tilalle.

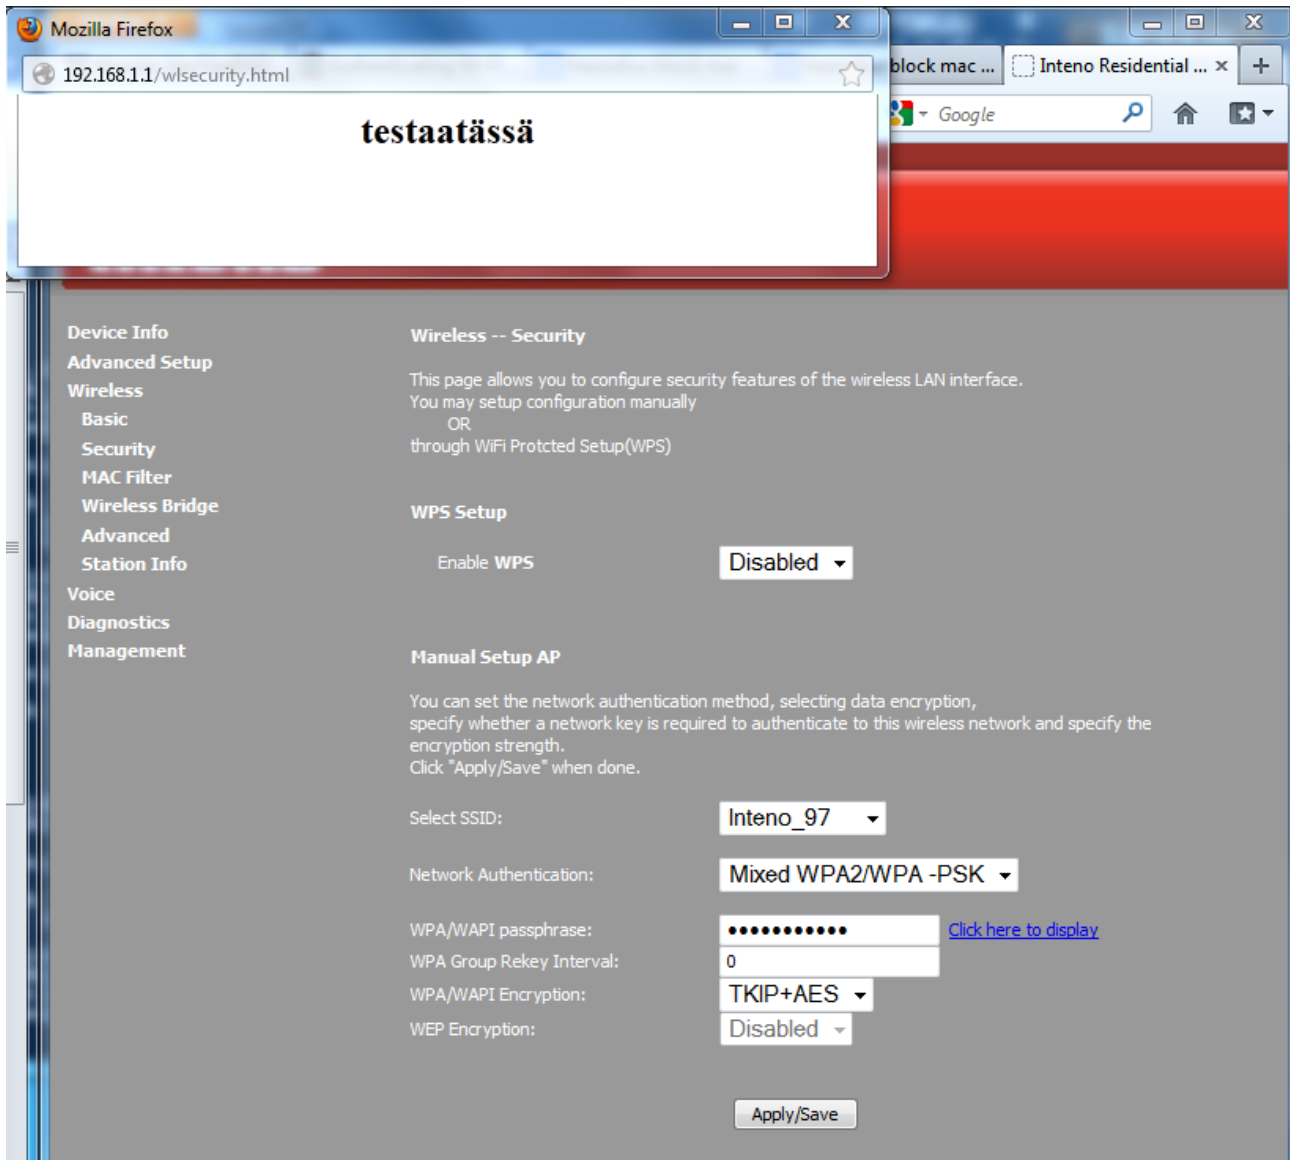

Klikkaamalla *Click here to display* voit varmistaa, että salasana on se mitä kirjoititkin. (Avautuu uuteen ikkunaan).